



Maintenance and Care Guide

- Do not leave the unit uncovered in a harsh environment and/or exposed to the elements. DO NOT store outdoors.
- Rustic Stands and Stations are intended to be used indoors. All Hostess Stands and Stations with laminate panels are intended for indoor use.
- Check powder and clear coating regularly for any scratches or dings which may compromise the unit's weather resistance. If you find a scratch or ding, use the applicable touch up paint ASAP.
- When transporting the unit, make sure the caster brakes are unlocked.
- Check and tighten the drawer tracks once a month to ensure proper functionality.
- When cleaning the unit, use a microfiber cloth with warm water and mild detergent if needed.
- Do not use any abrasive cleaners.
- Laminated panels should also be covered from direct sunlight to prevent discoloration.

LED Care & Maintenance

(Only Applicable if an LED Kit was Purchased)

- Remote and controller are 1:1, not universal. We recommend labeling the controllers if you have multiple bars.
- When transporting or breaking down the bar, be mindful of the LED strips. Disconnect the appropriate cables and connectors before beginning breakdown.
- When running your LED system, make sure the battery is not being used to power the bar while the charger is powering the battery. Use the battery or the charging cable to power the bar. **Use only one power source at a time** (if applicable). Having the battery charging while powering the bar will damage the battery.
- Do not leave your battery on the charger for more than 12 hours at a time. Leaving it on the charger for more than 12 hours at a time will damage the battery.
- Store the lithium battery in a cool and dry environment. Storage Temperature should be between 40 and 85 degrees Fahrenheit.
- Do not leave or use the battery in direct sunlight as this will increase the chances of overheating which may result in damage to the battery or fire.
- Do not use the battery if the battery becomes exposed to moisture, is damaged from being charged incorrectly, is damaged from being dropped or is left exposed to extreme temperatures.
- Do not use or leave the battery near heat or high temperature sources.
- If battery becomes hot to touch, do not use the battery. Remove it from the charger and the controller until it cools down.
- If the battery appears to deform, leak, smell peculiar, or any other noticeable difference stop use immediately.
- Incorrect use of lithium batteries or using a damaged lithium battery can cause a fire and other damages.
 - Lithium batteries cannot be taken on a plane or boat. If shipped they must be labeled and packaged properly following proper safety protocol.